

SimplyVibe™

# SV-S350<sup>Plus</sup>

## Portable Speakers

User Manual



### FM Operations

1. To find all of the radio stations, you have to perform an auto search.
2. To do this, please switch to FM mode and press & hold the center button (magnifying glass icon).
3. Make sure you are in an area that can get clear FM reception.
4. Wait until all the stations cycle through, which takes about 3-5 minutes.
5. The buttons should stop blinking after the stations have been saved.
6. Then you can just press the up and bottom to the correctly tuned stations.

### Laptop Operations

1. Switch to AUX mode
2. Connect the 3.5 mm audio cable on the laptop headphone jack and on the AUX jack on the speaker
3. Make sure the volume on the laptop is not on Mute and turned up to max
4. Make sure the speaker is turned on by pressing and the holding middle button until it turns blue

### SD Card /USB Flash Drive Operation

1. Switch to SD/UDisk mode that has MP3/WMA music saved in them
2. Plug in SD card or USB drive into the slot (only one at a time)
3. Wait for a couple of seconds and the music should start playing
4. Make sure the speaker is turned on by pressing and holding the middle button until it turns blue

## Dear Customer,

Thank you for purchasing our Portable Speaker-SV-S350P. In order to operate it correctly, please read this user manual carefully before using it.

- ▲ Keep speaker away from water and moisture, do not get it wet
- ▲ Keep speaker away from any heat source
- ▲ Please adjust to a suitable volume to avoid damaging your ears

### FAQ

- 1 If FM radio can't search any station  
-Pls confirm if the using environment has FM signal & auto searched local stations.
- 2 If it can't play SD card/USB Flash drive  
-Pls make sure to use good quality SD card/USB Flash drive and MP3 /WMA format.
- 3 To tell if the battery is fully charged or not  
-Pls check the LED indicator, it will go off when full charge of the battery. Battery should be charged for at least 4 hours before first use.
- 4 A way to improve a weak FM radio signal  
-Pls try to wear earphone. The line of earphone can be used as antenna
- 5 The 3.5 mm audio cable does not fit my iPad  
-Try to push the plug with a little force until you hear a click or all the way inserted into the jack. If this doesn't work please email sales@simplyvibe.com for further assistance.


### Specifications

Dual power supply: USB, removable Lithium Battery  
impedance: 4 Ω Frequency Responses: 76-108MHz  
Aux in : 3.5mm jack Output : 1W\*2 voltage : DC 5V  
Driver size: 50mm Dimensions : 9.05\*2.44\*1.57 inches  
N.W : 0.595lb Material: Plastic

### Contents

Speaker, USB cable, audio cable, user manual

## Function Instructions

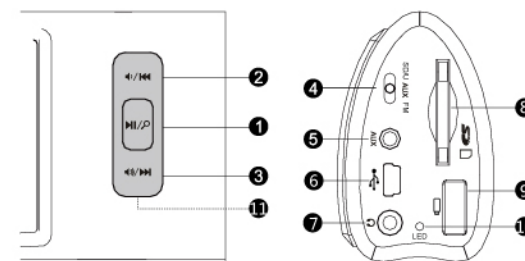

- 1 Power on/off, Play, Pause, Mute, FM auto search
- 2 Volume decrease/Previous programme
- 3 Volume increase/Next programme
- 4 SD card/USB flash drive/FM mode switch
- 5 Aux in
- 6 USB Charging interface
- 7 Earphone jack
- 8 SD card slot
- 9 USB Flash drive interface
- 10 LED indicator

### General Operations

- 1 SD mode/U-disk: Play/pause. FM mode: short press to achieve mute, long press to achieve auto search stations & saving. Note: when the operation of pause/mute exceed for 5 minute, it will auto come into power-saving mode, play again will be woke up. AUX mode: Play/Mute
- 2 SD mode/U-disk: enter previous song by "◀/⏮" for short time, long press to achieve volume decrease. FM mode: short press to enter previous station, long press to achieve volume decrease. AUX mode: Volume decrease
- 3 SD mode/U-disk: enter next song by "▶/⏭" for short time, long press to achieve volume increase. FM mode: short press to enter next station, long press to achieve volume increase. AUX mode: Volume increase
- 4 Power on/off, SD/U-disk/FM modeswitch
- 5 Aux in: Compatible with laptop, MP3, MP4, mobilephone, PSP etc.
- 6 Charging interface: 7 Earphone jack 8 SD card slot 9 U-disk interface 10 LED indicator: it is orange when charging and go off after full charge of the battery.
- 11 Power indicator: When lower power, the LED indicator will blink for 30 seconds then turn off automatically. Press "play" to restart when switch on power